

## VERTICAL CABLE MANAGER FILL CAPACITY CHART: FOR RACKS AND CABINETS

RACK CABLE MANAGERS						
CABLE TYPE	RFM PART #	80% fill	60% fill	50% fill	40% fill	30% fill
<b>Cat. 6a</b> 0.354" diam.	<b>RFM-RVCM</b>	214	161	134	107	80
	<b>RFM-RVCMG</b>	343	257	214	171	129
	<b>RFM-RVCM-B-10</b>	416	312	260	208	156
	<b>RFM-RVCM-B-12</b>	506	380	316	253	190
	<b>RFM-RVCM-HD8</b>	514	386	321	257	193
	<b>RFM-RVCM-HD10</b>	645	484	403	322	242
	<b>RFM-FMS-8</b>	490	367	306	245	184
	<b>RFM-FMS-10</b>	637	478	398	318	239
<b>Cat. 6</b> 0.250" diam.	<b>RFM-RVCM</b>	420	315	263	210	158
	<b>RFM-RVCMG</b>	672	504	420	336	252
	<b>RFM-RVCM-B-10</b>	816	612	510	408	306
	<b>RFM-RVCM-B-12</b>	992	744	620	496	372
	<b>RFM-RVCM-HD8</b>	1008	756	630	504	378
	<b>RFM-RVCM-HD10</b>	1264	948	790	632	474
	<b>RFM-FMS-8</b>	960	720	600	480	360
	<b>RFM-FMS-10</b>	1248	936	780	624	468
<b>Cat. 5e</b> 0.187" diam.	<b>RFM-RVCM</b>	778	583	486	389	292
	<b>RFM-RVCMG</b>	1244	933	778	622	467
	<b>RFM-RVCM-B-10</b>	1511	1133	944	756	567
	<b>RFM-RVCM-B-12</b>	1837	1378	1148	919	689
	<b>RFM-RVCM-HD8</b>	1867	1400	1167	933	700
	<b>RFM-RVCM-HD10</b>	2341	1756	1463	1170	878
	<b>RFM-FMS-8</b>	1778	1333	1111	889	667
	<b>RFM-FMS-10</b>	2311	1733	1444	1156	867
		<i>Number of Individual Cables</i>				

CABINET CABLE MANAGERS						
CABLE TYPE	RFM PART #	80% fill	60% fill	50% fill	40% fill	30% fill
<b>Cat. 6a</b> 0.354" diam.	<b>RFM-5__-VCM</b>	108	81	68	54	41
	<b>RFM-9__-VCM</b>	214	161	134	107	80
	<b>RFM-6__VBB</b>	81	61	51	41	30
	<b>RFM-7__VCM-HD</b>	342	256	214	171	128
	<b>RFM-FORT-CMS</b>	228	171	143	114	86
	<b>RFM-FORTA-CMS</b>	191	143	119	95	72
	<b>RFM-DR-10*</b>	219	164	137	109	82
<b>Cat. 6</b> 0.250" diam.	<b>RFM-5__-VCM</b>	212	159	133	106	80
	<b>RFM-9__-VCM</b>	420	315	262	210	157
	<b>RFM-6__VBB</b>	159	119	100	80	60
	<b>RFM-7__VCM-HD</b>	670	502	419	335	251
	<b>RFM-FORT-CMS</b>	447	335	279	223	168
	<b>RFM-FORTA-CMS</b>	374	280	234	187	140
	<b>RFM-DR-10*</b>	429	322	268	215	161
<b>Cat. 5e</b> 0.187" diam.	<b>RFM-5__-VCM</b>	386	289	241	193	145
	<b>RFM-9__-VCM</b>	777	583	486	389	291
	<b>RFM-6__VBB</b>	295	221	184	147	111
	<b>RFM-7__VCM-HD</b>	1240	930	775	620	465
	<b>RFM-FORT-CMS</b>	828	621	517	414	310
	<b>RFM-FORTA-CMS</b>	692	519	433	346	260
	<b>RFM-DR-10*</b>	794	596	497	397	298
		<i>Number of Individual Cables</i>				

\* note: **RFM-DR-10** can be used in conjunction with any **RFM-\_\_-VCT**