


## MOUNTING INSTRUCTIONS: HIGH DENSITY FINGER STYLE CABLE MANAGERS RFM-FMS-8 / RFM-FMS-10

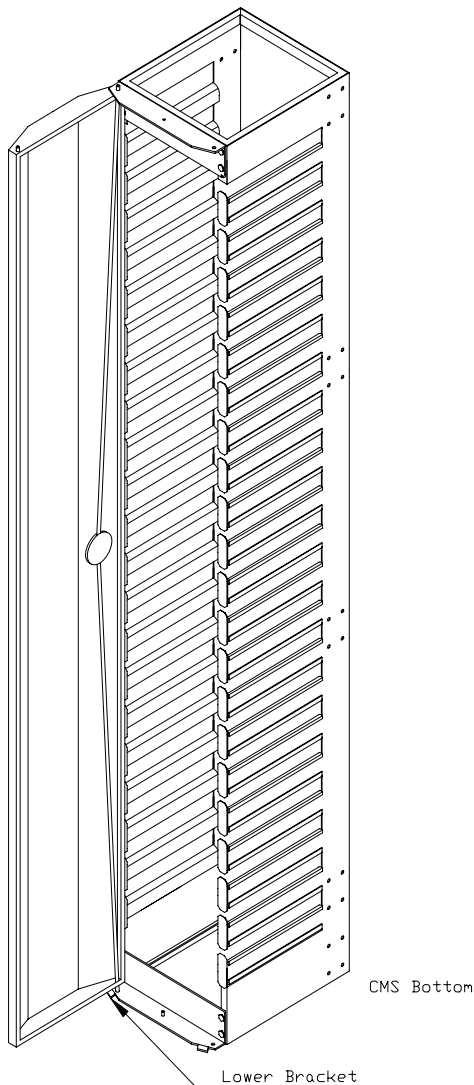

**NOTE: THIS UNIT WAS DESIGNED TO BE MOUNTED AS INDICATED IN THE DRAWING.**

**STEP 1:**

DETERMINE THE DIFFERENCE BETWEEN THE TWO MOUNTING BRACKETS (UPPER AND LOWER BRACKETS ARE UNIQUE) THE LOWER BRACKET HAS 2 LEAD-IN TABS (SEE DIAG.)

**STEP 2:**

DETERMINE THE DIFFERENCE BETWEEN THE TOP AND BOTTOM OF THE DOOR (THE BOTTOM OF THE DOOR HAS 2 TABS WHICH ASSIST IN THE OPERATION OF THE DOOR) (SEE DIAG.)

**STEP 3:**

ATTACH THE 'LOWER' TABBED BRACKET TO THE BOTTOM OF THE FMS, AND ATTACH THE OTHER 'UPPER' BRACKET TO THE TOP OF THE FMS (SEE DIAG.)

**STEP 4:**

INSTALL THE DOOR WITH THE TABS TOWARD THE BOTTOM TO ENSURE PROPER DOOR OPERATION

**STEP 5:**

SECURELY FASTEN ASSEMBLED FMS TO APPROPRIATE APPARATUS

