


HINGE ASSEMBLY INSTRUCTIONS FOR: RFM SERIES 30 CABINETS & RFM SERIES 24 CABINETS

NOTE: HINGES SHOULD BE ATTACHED TO CABINET PRIOR TO INSTALLING MOUNTING RAILS AND EQUIPMENT

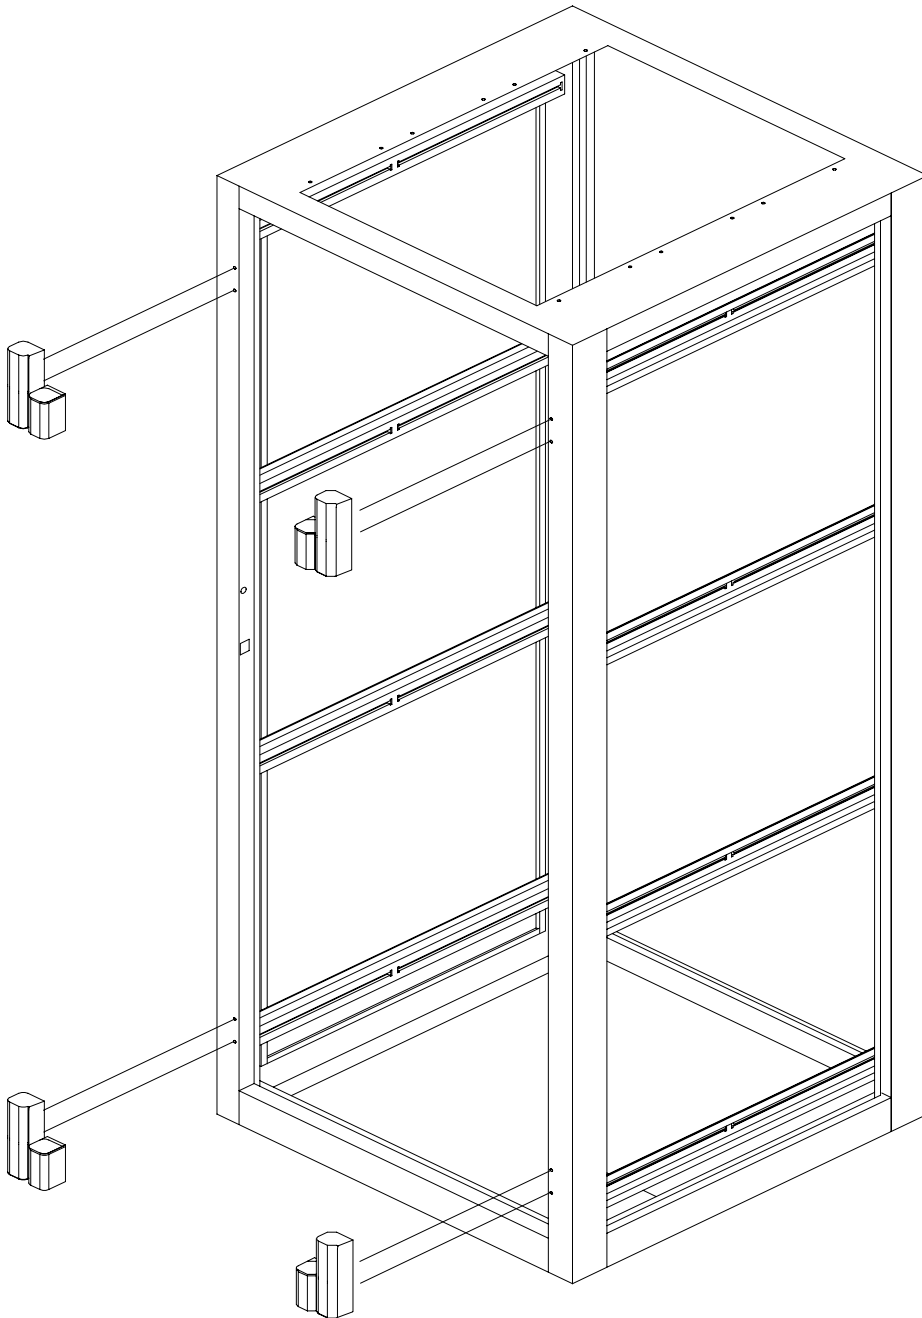

STEP 1:

ATTACH THE "L" SHAPED PORTION OF THE HINGE TO THE OUTSIDE OF THE CABINET FRAME USING SUPPLIED #10-32 SCREWS (SEE DIAG.)

STEP 2:

ATTACH THE "STRAIGHT PIN" SHAPED PORTION OF THE HINGE TO THE OUTSIDE OF THE CABINET DOOR USING THE SUPPLIED #10-32 SCREWS

NOTE: ENSURE THE "PIN" FACES DOWNWARD RELATIVE TO THE TOP OF CABINET DOOR